

# SKAARHOJ PTZ Pro v2B

For

## Canon PTZ



## USER GUIDE | June 2022

Get the latest version of this User Guide at: <https://www.skaarhoj.com/support>

# Contents

<b>Contents</b>	<b>2</b>
<b>Important Information</b>	<b>3</b>
Legal Notice	3
Warnings	3
Maintenance Precautions	3
Regulatory Compliance	3
What's In the Box	4
Overview	4
Features	4
<b>Controller Diagram</b>	<b>5</b>
Top	5
Backside	6
<b>System Configuration</b>	<b>7</b>
Connection	7
Power	7
Network Interface Details	8
Power over Ethernet (PoE) Specifications	8
<b>Accessing Blue Pill</b>	<b>8</b>
DHCP or Static IP	8
Wi-Fi Access Point	9
Link from SKAARHOJ Firmware Updater	9
SKAARHOJ Firmware Updater and Micro USB	10
<b>Select Mapping</b>	<b>10</b>
<b>Adding Devices</b>	<b>11</b>
Auto Discover	11
Manually Added	11
Device Details	12
<b>Populate Constant Sets</b>	<b>13</b>
<b>Controller Use</b>	<b>14</b>
<b>Dimensions</b>	<b>15</b>
<b>Troubleshooting</b>	<b>15</b>
<b>Contact Support</b>	<b>16</b>
<b>Additional Resources</b>	<b>16</b>

# Important Information

## Legal Notice

### **Attention:**

The content and instructions of this document are subject to change without prior notice. Updates will be added to the manual.

Best effort have been conducted to verify the correctness of the content in this manual, but no statement, information, or recommendation in this manual shall constitute formal guarantee of any kind, expressed or implied. We shall not be held responsible for any technical or typographical error in this manual.

The product and graphic appearance demonstrated in this manual is for reference only, and may differ from the actual appearance of your device and associated software applications.

Use of this manual and the subsequent result shall be entirely on the user's own responsibility.

Reference to product names of other companies in this manual are the trademark or registered trademark of the respective companies.

## Warnings

- If the product does not work properly, please contact your dealer. Never attempt to disassemble the controller yourself (we will not assume any responsibility for problems caused by unauthorized repair or maintenance)
- This installation should be made by a qualified service person and should conform to all the local codes
- When shipping, the controller should be packed in its original packaging
- Make sure the power supply voltage is correct before using the controller
- Do not drop the controller or subject it to physical shock

## Maintenance Precautions

- If there is dust on the controller and the displays, remove the dust gently using a oil-free brush or dust blowing apparatus

- Do not use organic solvents, such as benzene or ethanol when cleaning the surface of the controller

## Regulatory Compliance

### **For private households: Information on Disposal for Users of WEEE**

This symbol on the product(s) and / or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge.



Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

### **For professional users in the European Union**

If you wish to discard electrical and electronic equipment (EEE), please contact your dealer or supplier for further information.

### **For disposal in countries outside of the European Union**

This symbol is only valid in the European Union (EU). If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

## What's In the Box

- 1 x SKAARHOJ PTZ Pro v2B Controller
- 1 x Power Adaptor including power plug
- 1 x 2m CAT.5E Ethernet cable

## Overview

This user guide is suitable for the following models


- PTZ Pro v2B with Canon CR-N300/N500 default configuration

## Features

- Support for XC protocol including
  - Zoom
  - Zoom Mode
  - Focus
  - Auto Focus
  - MF Speed
  - Face Detection
  - Iris Absolute
  - Auto Iris
  - White Balance
  - Black Gain
  - Gain
  - Sharpness
  - Shutter
  - Shooting Mode
  - Joystick Sensitivity
  - Gain Mode
- Image Stabilisation
- Presets
- Preset Speed
- Preset Time
- Preset Store Mode
- NR Mode
- Noise Reduction
- Super crisp display tiles for settings
- High-quality encoders with RGB backlight for function identification
- Four-way buttons with OLED legends for dynamic labelling and functionality
- Classic PTZ joystick with top button reset
- Power: 5W-30W PoE (+)
- PoE Standard: IEEE 802.3af/t
- Option for changing configuration layout


# Controller Diagram

Top

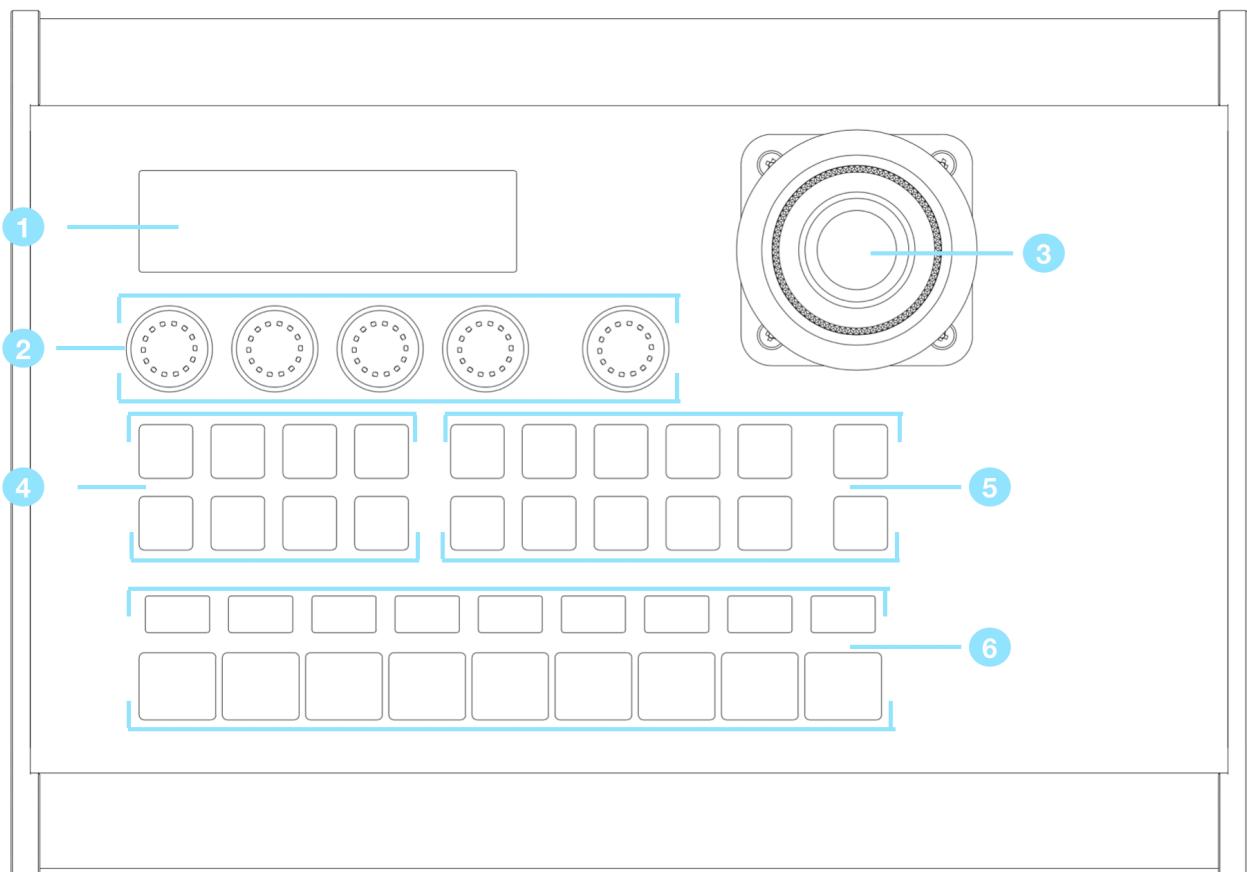

1. Large display with 8 tiles. Functions associated with encoders from group 2 and buttons in groups 4 and 5
2. 5 rotary encoders with RGB backlight for function identification
3. 3 point joystick for pan/tilt/zoom and top button home function
4. Menu navigation buttons
5. Camera preset buttons
6. Camera select buttons with associated displays

## Backside

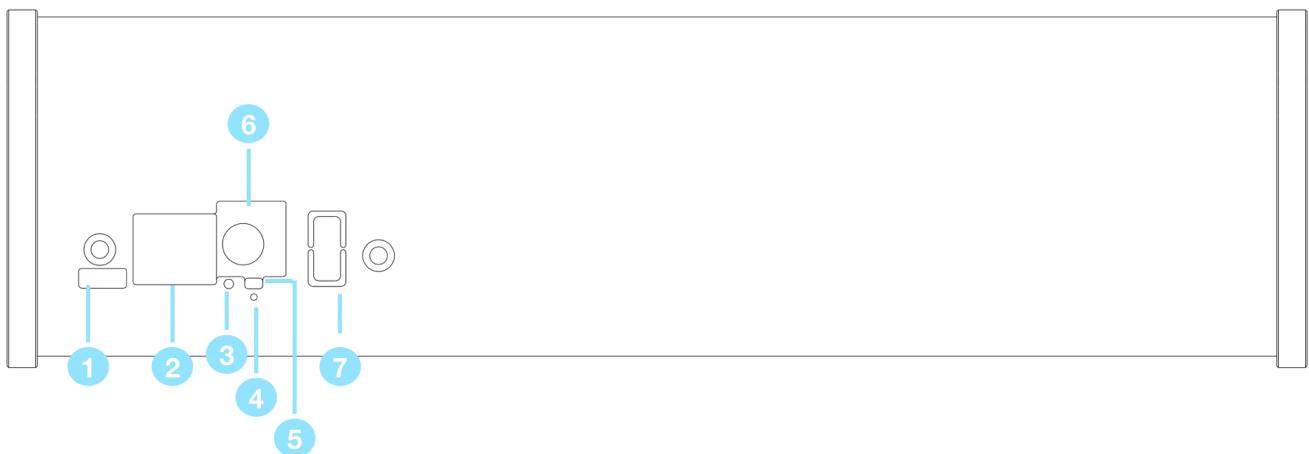

### 1. Micro USB Port

For serial communication with SKAARHOJ Firmware Updater

### 2. IP Network RJ45 Port

For IP Control and 5W-30W PoE (+) /PoE Standard: IEEE 802.3af/t

### 3. Status LED

For monitoring and debugging

### 4. Reset

Use only under the guidance of SKAARHOJ support

### 5. Config Button

To enable WiFi Access Point

### 6. 12V DC Power Supply

Connect the supplied DC Power adaptor

### 7. USB-A Port


For specific connection types.

# System Configuration

## Connection

The SKAARHOJ PTZ Pro v2B communicates to camera(s) via a networked IP connection. This is the supported case. No video signal processing is done on the SKAARHOJ PTZ Pro v2B.

The layout of the configuration for the PTZ Pro v2B is expandable to handle multiple connected cameras with a camera select row of buttons.

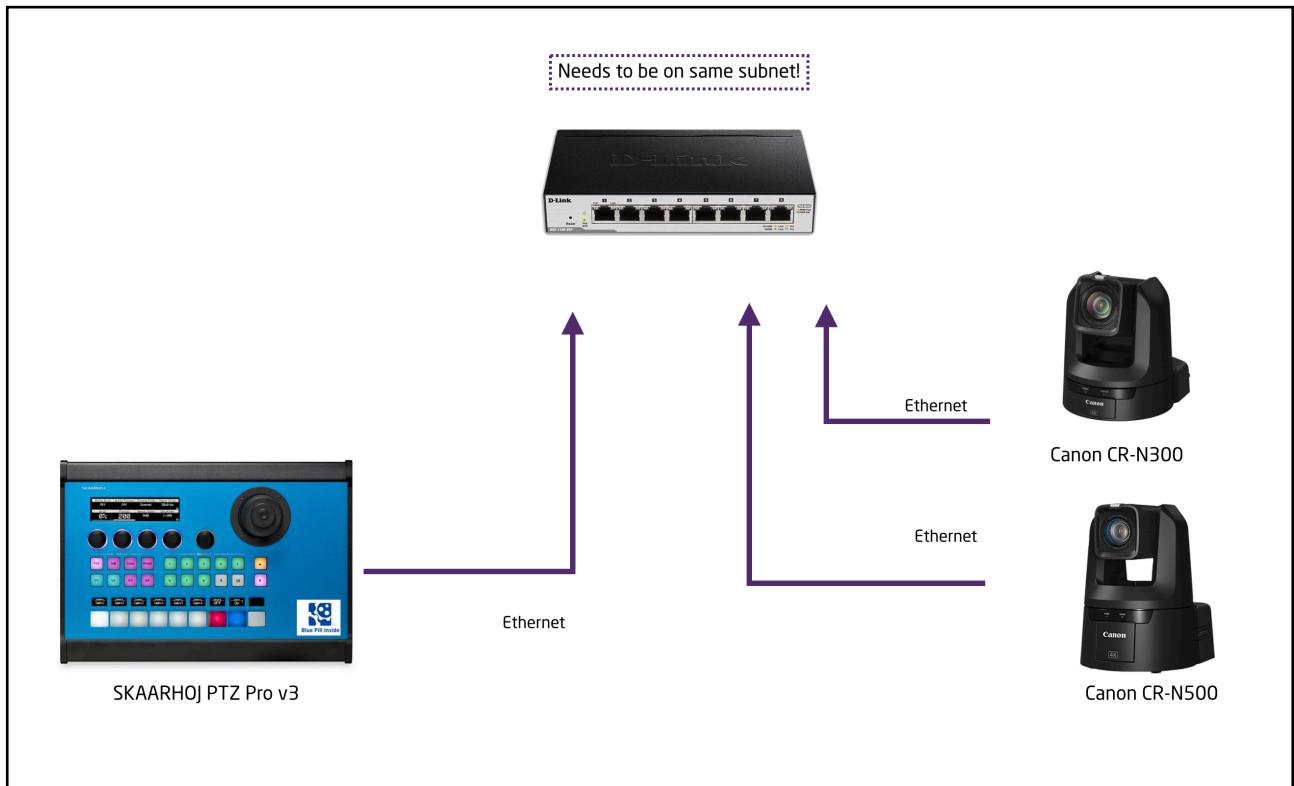

## Power

- Use only the DC power adapter supplied with the controller. Do not use any other DC power adaptor
- If using PoE to power the controller, make sure the network switch supports 5W-30W PoE (+)/PoE Standard: IEEE 802.3af/t
- Ensure the PoE provider has sufficient power budget to power the controller. Otherwise it will not function properly
- Power Consumption: 6 Watts

## Network Interface Details

-SKAARHOJ Blue Pill controllers have a 1 GBit network interface

-5W-30W PoE (+)

-PoE Standard: IEEE 802.3af/t

Remember a SKAARHOJ controller and client must be on the same subnet (192.168.10.\* or one defined for the local network used by the controller). With multiple SKAARHOJ units connected to the same network they need to have different IP addresses!

## Power over Ethernet (PoE) Specifications

We use the PoE industry standard 5W-30W PoE (+) IEEE802.3af/t. To power our controllers using PoE it is important the switch supports this standard. Please notice some manufactures such as Ubiquity have their own non-standard 24V type of PoE which is incompatible with our controllers. Especially pay attention to the standard when using a PoE injector.


## Accessing Blue Pill

### DHCP or Static IP

The Blue Pill's user interface is accessed via the device's IP Address and any web browser. The IP address can be found on the display after it is plugged into a network connection with PoE or a network connection and a power supply (5V Micro USB).



Entering the IP address into the address bar of a search engine will bring up a prompt for username and password. The default is username: **admin** password: **skaarhoj**

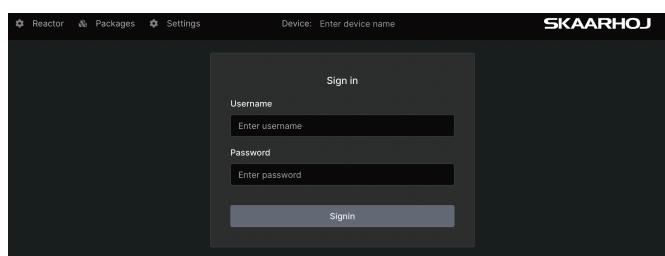


## Wi-Fi Access Point

If the Blue Pill is not displaying an IP address, the web interface is accessible by enabling the internal Wi-Fi access point.


To enable the Wi-Fi access point, gently press and hold the config button on the side of the Blue Pill for about 3 seconds (Found next to the Ethernet jack. Use a flat screw driver, a paper clip or similar). When released, it will enable the internal Access Point and the LED will light up purple. It will show up in the Wi-Fi networks list as SKAARHOJ-XXXXXX (Blue Pill's serial number).

The default password is: **skaarhoj**

The web interface is then accessed at the IP address: **192.168.4.1**

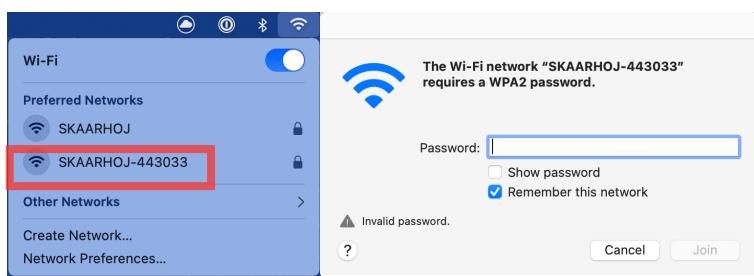


After accessing the Blue Pill it is best to navigate to the System Menu/System page to set a static IP address. Once saved, the new IP address will appear on the Blue Pill's display, it may be necessary to reboot or power cycle the device afterwards.

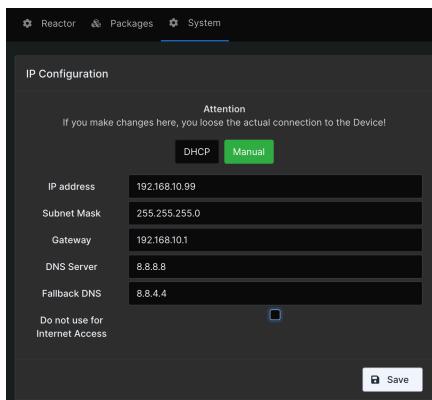


## Link from SKAARHOJ Firmware Updater

If the SKAARHOJ Firmware Updater open on a computer running on the same subnet as the Blue Pill, the Blue Pill should appear below the main controller access buttons of the updater. Clicking on Configure next to the panel's information will open the web interface directly. The Blue Pill does not need to be connected to the computer via USB.

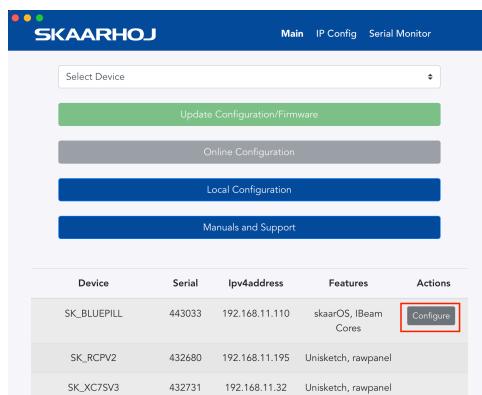


## SKAARHOJ Firmware Updater and Micro USB


If a network connection to the Blue Pill is not available, the IP address can be set using a Micro USB cable. In this case the Blue Pill will appear in the "Select Device" dropdown and the "IP Config" tab in the Firmware Updater can be used to set the IP address (same procedure from UniSketch):

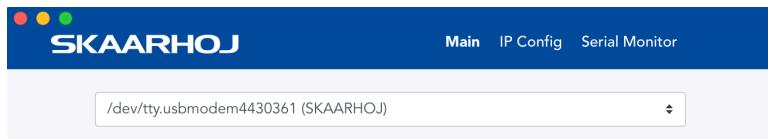

In this case it was identified as "/dev/tty.usbmodem4430361" (on MacOS) and pressing IP Config will open the IP set up page:

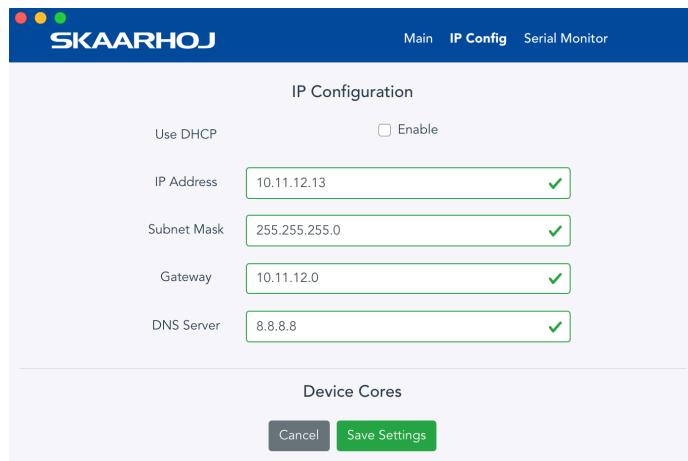


If/When the warning below appears, press "Submit" and reboot the Blue Pill:

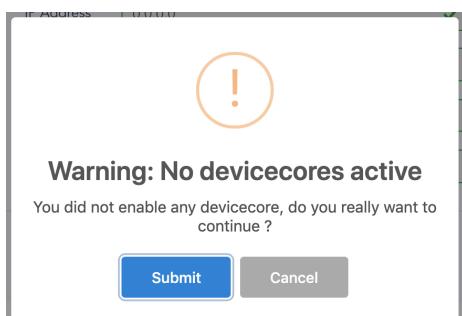

## Select Mapping


The controller's layout is determined by the Mapping. For our Canon PTZ integration, PTZ Pro.Generic is the needed mapping.

The mapping is chosen in the drop down next to the panel.

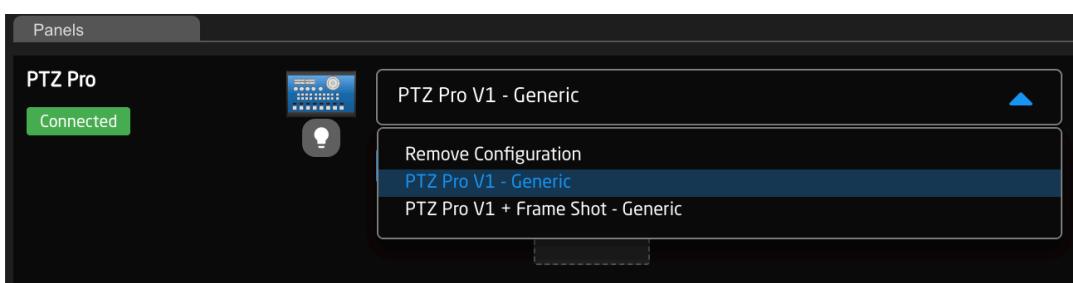


# Adding Devices

There are two main ways a device can be added to a new Blue Pill, Auto Discover and Manually.

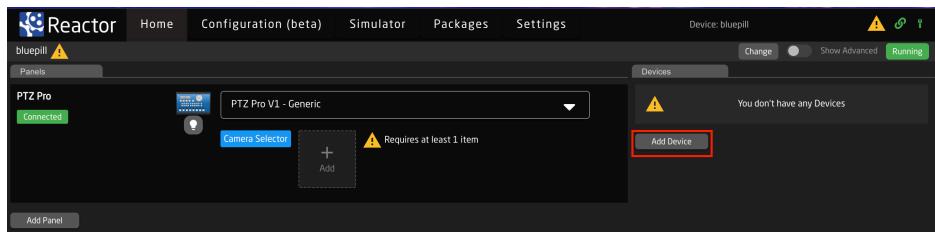

## Auto Discover


Searching on the network for devices will find many types by a combination of mDNS look-ups and other methods. However, not all devices can be discovered easily, but with those that can, it's a simple click of a button to add it to the Blue Pill device collection. Following an Auto Discover some device details may still be needed to establish connectivity. See Device Details section for set up.

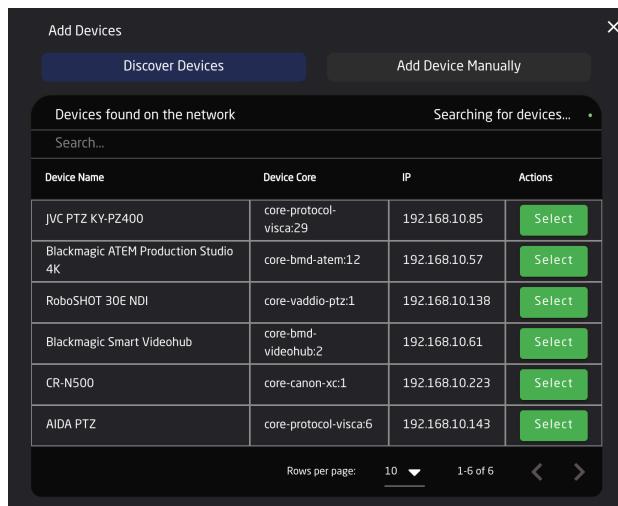

Pressing SHIFT + the green Select button will allow for multiple panel selection.

## Manually Added


If a device must be added manually, it's easy to look it up in the list of supported models. Following a manual choice of device, the user will have to enter the IP address and other possible device detail information. See the Panel Details section for set up.

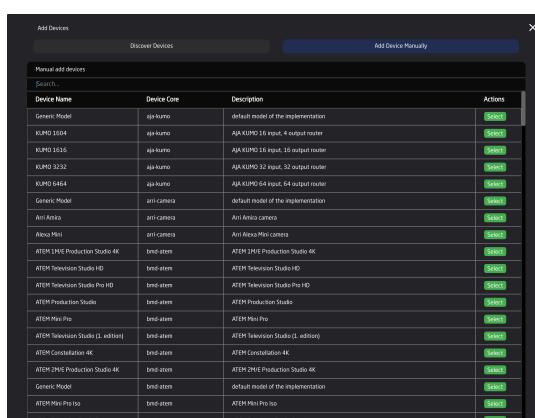


Pressing SHIFT + the green Add Device button will allow for multiple panel selection.

## Device Details

Panels have their status displayed clearly in the overviews on the Home screen.

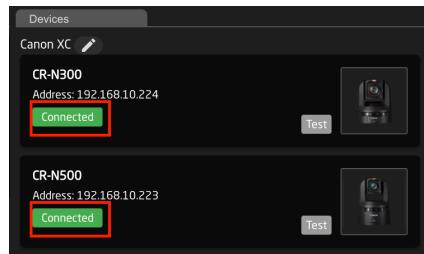


Clicking on a device name in the Devices section will open up the details. Here the name, ID number, Active status, and IP address of the device can be changed. By default the device name will be the same as the model name, the ID will be auto generated in order, and the status will be active. A device's status needs to be active for use. It is not always necessary to enter the Username and Password, however if you are unable to connect, try entering the needed username and password.

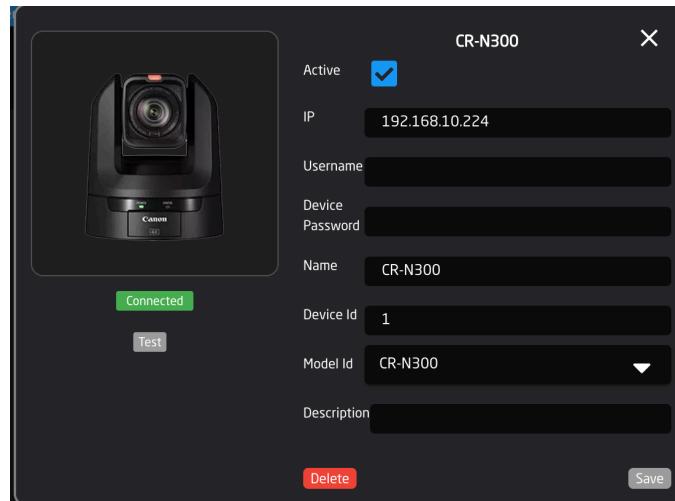


# Populate Constant Sets

The final step is to fill in any constant sets. The constant sets are available based on the chosen configuration and should contain entries such as specific cameras for a PTZ controller, or the inputs for a video switcher etc. They are most common when working with PTZ cameras and routing panels, though may be available for additional device configurations.

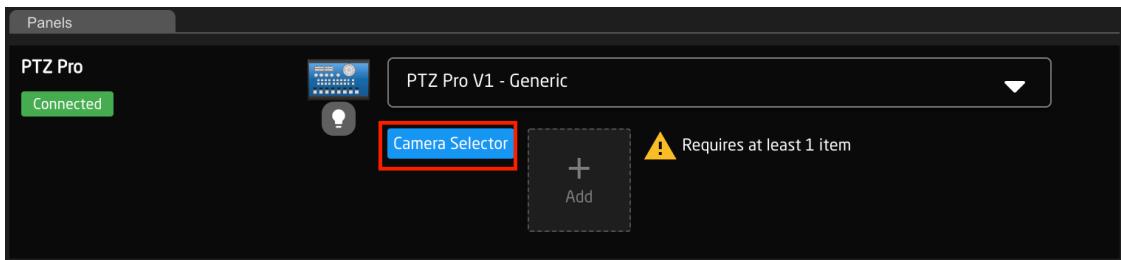


The setup tables will auto save and quickly appear on displays and enable the function.

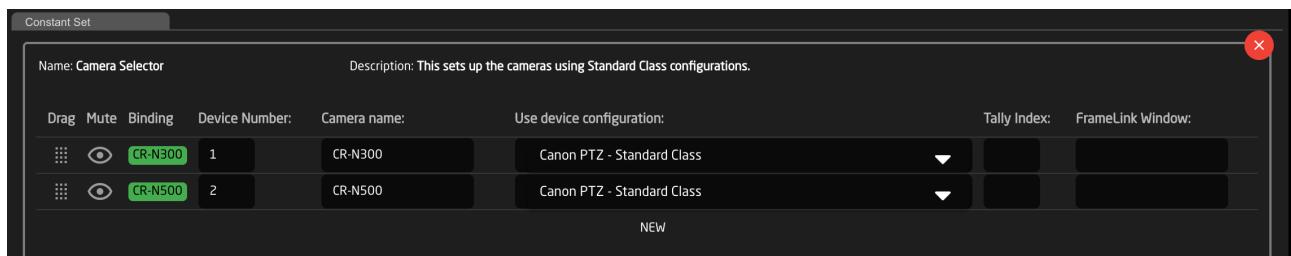

Column	Description
Drag	Allows for quick rearranging of camera order. Right clicking on drag will allow for deleting the row.
Mute	Allows for removing access to a specific camera or to leave a blank spot on the panel
Binding	Allows for the selecting of a specific connected camera
Camera Name	Customizable name to appear on the displays. Character limit is determined by size of display and can vary.
Device Number	Ties the camera selector to the specific device. This is found in the Devices section. Each device will have a unique device number per device core. This box should auto-populate when a camera is selected in binding
Link Selector	Selects the protocol based configuration associated with camera. Needed protocol can be seen in the Devices section, each device is grouped into their native protocols. <b>Double check the correct configuration is selected. Improper selection will effect camera control.</b>
Channel Link	Selects the needed protocol for Iris/Master Black control. For cameras without a variable lens this will follow the same protocol as the device. For cameras with a variable lens, select the protocol for the attached lens. <b>Not available on all configuration classes.</b>
Tally Index	Sets the Tally Index number to connect with associated tally source device. See Blue Pill/Reactor Manual for more information. <b>This column does not need to be filled out for standard operation.</b>
Route Index	Sets the Route Index number to connect with associated routing device. See Blue Pill/Reactor Manual for more information. <b>This column does not need to be filled out for standard operation.</b>
FrameLink Window	Sets the FrameLink Window value associated with the FrameLink device core for use with FrameLink compatible devices. See Blue Pill/Reactor Manual for more information. <b>This column does not need to be filled out for standard operation.</b>

# Controller Use

Overall the controller have eight menus. To change between the menus press M1-M8. The camera select row is dynamic to the number of cameras connected.

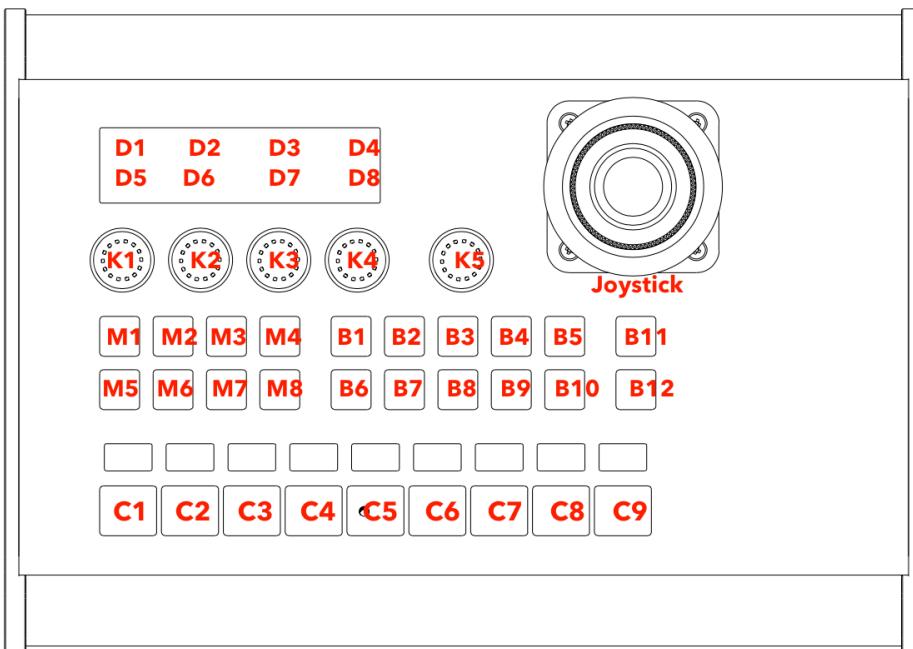

Joystick

UD	Tilt
LR	Pan
Rotate	Zoom
Top Button	Home

M1-M8

<b>M1</b>	Exposure
<b>M2</b>	White Balance
<b>M3</b>	Black
<b>M4</b>	Focus
<b>M5</b>	Home
<b>M6</b>	Modes
<b>M7</b>	Presets
<b>M8</b>	Various

D1-D8

<b>D1</b>	Selected Menu
<b>D2</b>	-
<b>D3</b>	Preset/Camera Page (B1-10)
<b>D4</b>	Focus Position (K5)
<b>D5</b>	K1
<b>D6</b>	K2
<b>D7</b>	K3
<b>D8</b>	K4

B1-B12

	<b>Preset Select</b>	<b>Camera Select</b>
<b>B1-10</b>	Preset Select	Camera Select
<b>B11</b>	Preset Page Up	Camera Page Up
<b>B12</b>	Preset Page Down	Camera Page Down


K1-K5

	Exposure	White Balance	Black	Focus	Home	Modes	Preset	Various
<b>K1</b>	Auto Iris	WB Mode	Sharpness Level	Focus Mode	Shooting Mode	Shutter Mode	Speed Mode	Joystick Sensitivity
<b>K2</b>	Iris (F-Stop)	WB Kelvin	BG Level	Face Detect	Joystick Sensitivity	Gain Mode	Preset Speed	Zoom Mode
<b>K3</b>	Shutter Speed	Red Gain	BG Point	F. Track	MF Speed	ND Filter	Preset Time	NR Mode
<b>K4</b>	Gain	Blue Gain	BG Range	AF Speed	Focus Mode	Image Stabilization	Store Mode	NR
<b>K5</b>	Focus	Focus	Focus	Focus	Focus	Focus	Focus	Focus

### K1-K5 Eng. Menu (long press M8 to access)

	Brightness (M1)	Sleep (M2)	Home (M5)
K1	Dim Time	Sleep	Pan Direction
K2	Display Brightness	Sleep Time	Tilt Direction
K3	LED Brightness	-	Zoom Direction
K4	-	Expert Mode	Focus Direction
K5	-	-	-

## Dimensions

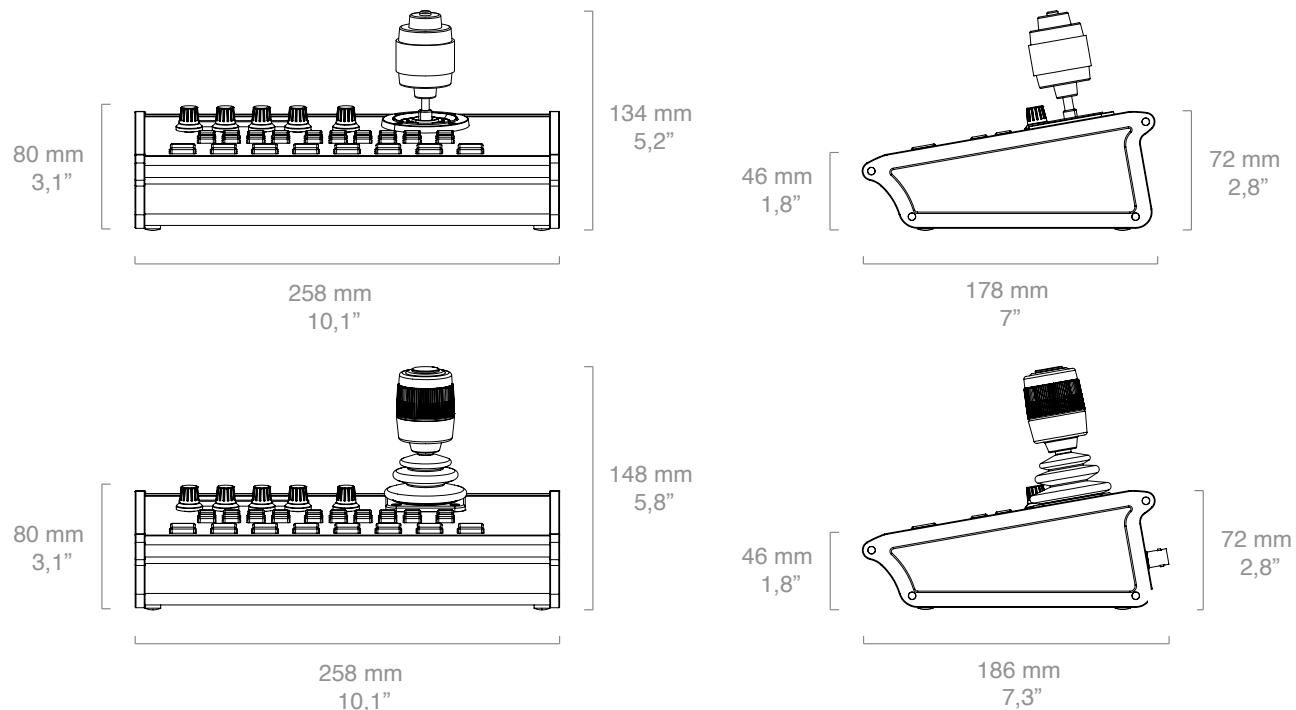

## Troubleshooting

Home Screen disappeared from web interface	-Check that Reactor is running in the Packages section. If it is not, restart it.
Can't find IP address	-Connect the controller to the computer via USB and use the Skaarhoj Firmware Updater to identify the IP address or set a static IP address. <a href="https://www.skaarhoj.com/support/firmware-updater">https://www.skaarhoj.com/support/firmware-updater</a>
Controller not connected	-Check the IP address is correct -For Blue Pill Inside units the IP should be: <b>host</b> and the type should be: <b>server</b>
Cameras not connected	-Check their IP addresses are correct -Check the username and password are correct
Other Questions	Check out the full Blue Pill/Reactor manual available at <a href="http://www.skaarhoj.com/support">www.skaarhoj.com/support</a>

# Contact Support

You are always welcome to contact us for support questions - write an email to [support@skaarhoj.com](mailto:support@skaarhoj.com) and we will do our best to accommodate your request.

In order for us to provide the best support please state:

- Which SKAARHOJ unit it is about
- The serial number of your device (small silver label with 6 digits)
- The nature of the problem
- Which hardware device(s) you are controlling and their firmware version
- If you have successfully made contact with the web interface
- Your operating system



## Additional Resources

For additional information, tips, and tricks please visit our YouTube page at:

[www.youtube.com/SKAARHOJ](https://www.youtube.com/SKAARHOJ)

For additional manuals, please visit our website or wiki:

<https://www.skaarhoj.com/support/manuals>

<https://wiki.skaarhoj.com/>

For additional manuals, check out our GitHub repository:

<https://github.com/SKAARHOJ/Support/tree/master/Manuals/Blue%20Pill>